




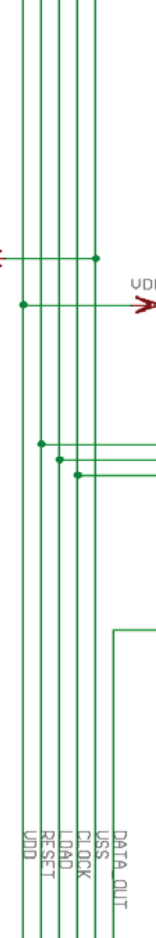


AL SIGUIENTE S88

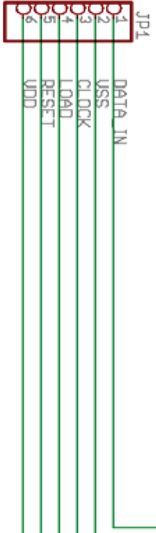






A LA CENTRAL

Feedback module S88

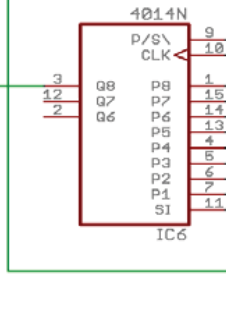
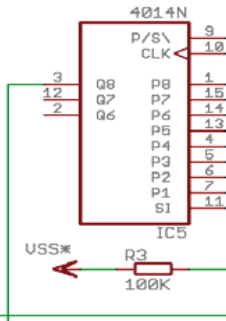


Direcciones  
66, 68 .....78, 80

Direcciones  
65, 67 .....77, 79

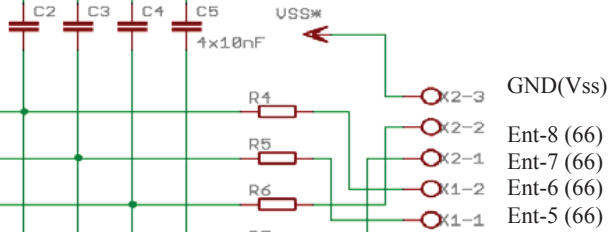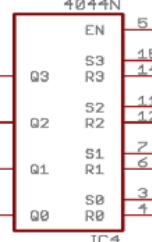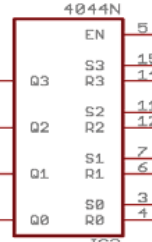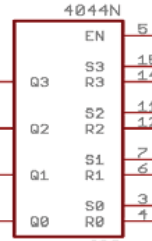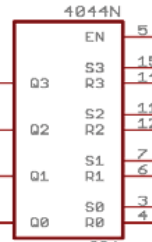


- GND(Vss)
- Ent-8 (66)
- Ent-7 (66)
- Ent-6 (66)
- Ent-5 (66)

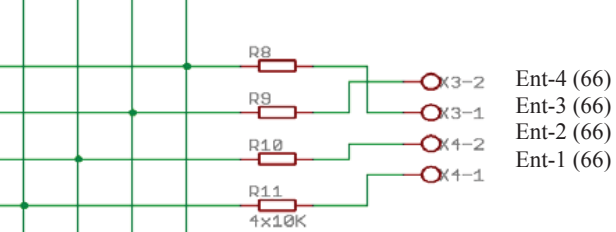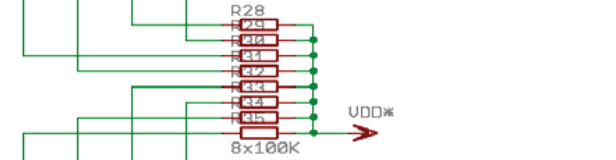

- Ent-4 (66)
- Ent-3 (66)
- Ent-2 (66)
- Ent-1 (66)



- GND(Vss)
- Ent-8 (65)
- Ent-7 (65)
- Ent-6 (65)
- Ent-5 (65)

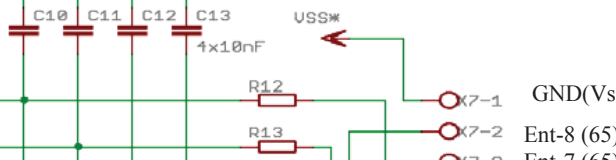

- Ent-4 (65)
- Ent-3 (65)
- Ent-2 (65)
- Ent-1 (65)

